




SmartGen
ideas for power

HGM410DC GENSET CONTROLLER USER MANUAL

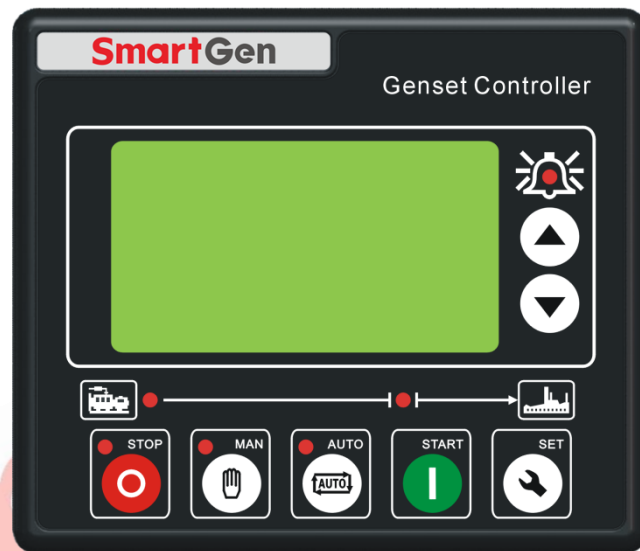

SMARTGEN (ZHENGZHOU) TECHNOLOGY CO.,LTD.



CONTENTS

1 OVERVIEW	4
2 PERFORMANCE AND CHARACTERISTICS.....	4
3 SPECIFICATION	6
4 OPERATION.....	7
4.1 PUSHBUTTONS.....	7
4.2 PANEL.....	8
4.3 AUTOMATIC START/STOP OPERATION	8
4.3.1 Auto Remote Start Sequence.....	8
4.3.2 Auto Remote Stop Sequence.....	9
4.3.3 Battery Under Volt Start/Stop Sequence	9
4.3.4 Auto Self-check Start Sequence.....	9
4.3.5 Manual Start/Stop Operation	9
5 PROTECTION	10
5.1 WARNINGS	10
5.2 SHUTDOWN ALARM	12
6 CONNECTIONS	15
7 DEFINITION AND RANGE OF PARAMETERS	17
7.1 PARAMETER CONTENTS AND RANGE	17
7.2 PROGRAMMABLE OUTPUT 1-5.....	24
7.3 PROGRAMMABLE INPUT 1-4 TABLE (ACTIVE WHEN CONNECT GND (B-)).....	25
7.4 SENSOR SELECT.....	26
7.5 CONDITIONS OF CRANK DISCONNECT	27
8 PARAMETERS SETTING.....	28
8.1 SETTING MENU.....	28
8.2 PARAMETERS SETTING.....	28
8.3 INFORMATION.....	28
8.4 LANGUAGE	28
8.5 MODE	28
9 SENSOR SETTING	29
10 COMMISSIONING.....	30
11 TYPICAL APPLICATION.....	31
12 FIXING CLIPS	32
13 OVERALL DIMENSION AND PANEL CUTOUT.....	32
14 INSTALLATION ANNOUNCEMENTS.....	33
14.1 BATTERY VOLTAGE INPUT	33
14.2 SPEED SENSOR INPUT.....	33
14.3 OUTPUT AND EXPANSION RELAY	33
14.4 AC INPUT	33
14.5 WITHDRAW VOLTAGE TEST	33
15 TROUBLESHOOTING	34

1 OVERVIEW

HGM410DC Genset Controller integrates digitization, intelligentization and network technology which are used for genset automation and monitor control system of single unit to achieve automatic start/stop, data measure, alarm protection and “three remote” (remote control, remote measuring and remote communication). It fit with LCD display, optional Chinese/English/Spanish/Russian/Turkish languages interface, and it is reliable and easy to use.

The powerful 32-bit ARM processor contained within the module allows for precision parameters measuring, fixed value adjustment, time setting and set value adjusting and etc. All parameters can be configured from front panel and they can be configured or monitored via auxiliary interface on PC (SG72 module produced by our company can be used to USB to LINK and RS485 ports). Due to its compact structure, simple connections and high reliability, **HGM410DC** can be widely used in several of genset automation systems.

2 PERFORMANCE AND CHARACTERISTICS

HGM410DC is used for ASM (Automatic Start Module), it controls generator to start/stop by remote signal:

- 132x64 LCD with backlight, selectable language interface (Chinese, English, Spanish, Russian and Turkish), push-button operation;
- RS485 Communication Port, which achieves long distance remote control with simple connection;
- Suitable for 3-phase 4-wire, 3-phase 3-wire, single phase 2-wire, and 2-phase 3-wire systems with voltage 120/240V and frequency 50/60Hz;
- Collects and shows 3-phase voltage, current, power parameter and frequency of generator or mains.

Generate

- Line Voltage (Uab, Ubc, Uca)
- Phase Voltage (Ua, Ub, Uc)
- Frequency (Hz)

Load

- Current (IA, IB, IC)
- Active Power (kW)
- Reactive Power (kvar)
- Apparent Power (kVA)
- Power Factor (PF)

—For generator, controller has over voltage, under voltage, over frequency, under frequency and over current detection functions;

—Precision collect and display parameters about Engine:

- Temp. (WT) °C/°F both be displayed
- Oil pressure (OP) kPa/Psi/Bar all be displayed
- Fuel Level (FL) % (Unit)
- Engine Speed (RP) RPM (Unit)












- Battery Voltage (VB) V (unit)
 - Charger Voltage (VD) V (unit)
 - Hours Counter (HC): Max. 999999 hours
 - Start times: Max.999999 times
- Control & Protection: automatic start/stop of the genset, ATS(Auto Transfer Switch) control with perfect fault indication and protection function;
- Storage battery under voltage start: start when battery is under voltage, stop when voltage is normal;
- Genset self-check function: automatic start when the genset hasn't been running for a long time and automatic stop when the genset has been running for a while;
- With ETS(Energize To Stop), idle control, pre-heat control, speed raise control and speed drop control function; All output ports are relay-out;
- Parameter setting: parameters can be modified and cannot be lost even in case of power outage; all the controller parameters can be adjusted using front panel of the controller or via PC using an SG72 adaptor.
- Multiplex input port 3 and 4 can be used in various fields: input 3 can be used as auxiliary input port or level sensor while input 4 can be used as auxiliary input port or configurable sensor.
- More kinds of curves of temperature, oil pressure, fuel level can be used directly and users can define the sensor curves by themselves;
- Configurable sensor: can be set as temperature sensor, oil pressure sensor or fuel level sensor, enable the detection of double temperature, double oil-pressure and double fuel level.
- Multiple crank disconnect conditions (magnetic pickup, oil pressure, generator frequency) are optional;
- Widely Power supply range: DC(8~35)V, suitable to different start battery voltage environment.
- All parameters used digital adjustment, instead of conventional analog modulation with normal potentiometer, more reliability and stability;
- Modular design, self-extinguished ABS plastic enclosure, pluggable connection terminals and embedded installation way; compact structure with easy mounting.

3 SPECIFICATION


Items	Contents
Working Voltage	DC8. 0V to 35. 0V, Continuous Power Supply.
Overall Consumption	<3W(Standby mode: ≤2W)
AC voltage Input: 3 Phase 4 Wire 2 Phase 3 Wire Single phase 2 Wire 3 Phase 3 Wire	AC15V - AC360V (ph-N) AC15V - AC360V (ph-N) AC15V - AC360V (ph-N) AC30V - AC620V (ph-ph)
Alternator Frequency	50Hz/60Hz
Speed Sensor Voltage	1.0V to 24V (RMS)
Speed Sensor Frequency	10,000 Hz (max)
Start Relay Output	5A DC28V power supply
Auxiliary Relay Output 1	5A DC28V power supply
Auxiliary Relay Output 2	5A DC28V power supply
Auxiliary Relay Output 3	5A DC28V power supply
Auxiliary Relay Output 4	5A AC250V voltage-free output
Auxiliary Relay Output 5	5A AC250V voltage-free output
Overall Dimensions	130mm x 112mm x 39mm
Panel Cutout	110mm x 90mm
CT Secondary Current	5A (rated)
Working Condition	Temperature: (-25~70)°C; Humidity: (20~93)%RH
Storage Condition	Temperature: (-25~70)°C
Protection Level	IP55 Gasket
Insulation Intensity	Apply AC2.2kV voltage between high voltage terminal and low voltage terminal; The leakage current is not more than 3mA within 1min.
Weight	0.30kg

4 OPERATION

4.1 PUSHBUTTONS

Key	Function	Description
	Stop/ Reset	Stop running generator; In case of alarm condition, pressing the button will reset alarm; In stop mode, pressing and holding the button for 3 seconds will test indicator lights (lamp test); During stopping process, press this button again to stop generator immediately.
	Start	Start genset in Manual/Test mode.
	Manual	Pressing this key will set the controller in to manual mode. Pressing this key and  or  in the same time can adjust contrast of LCD.
	Auto	Pressing this key will set the module into auto mode.
	Set/Confirm	Pressing this key will enter into Main Menu; In setting parameter status, press this key will shift cursor or confirm setting value.
	Up/Increase	Scrolls the screen up; Shift the cursor up or increase the set value in parameter setting menu.
	Down/Decrease	Scrolls the screen down; Shift the cursor down or decrease the set value in parameter setting menu.

4.2 PANEL

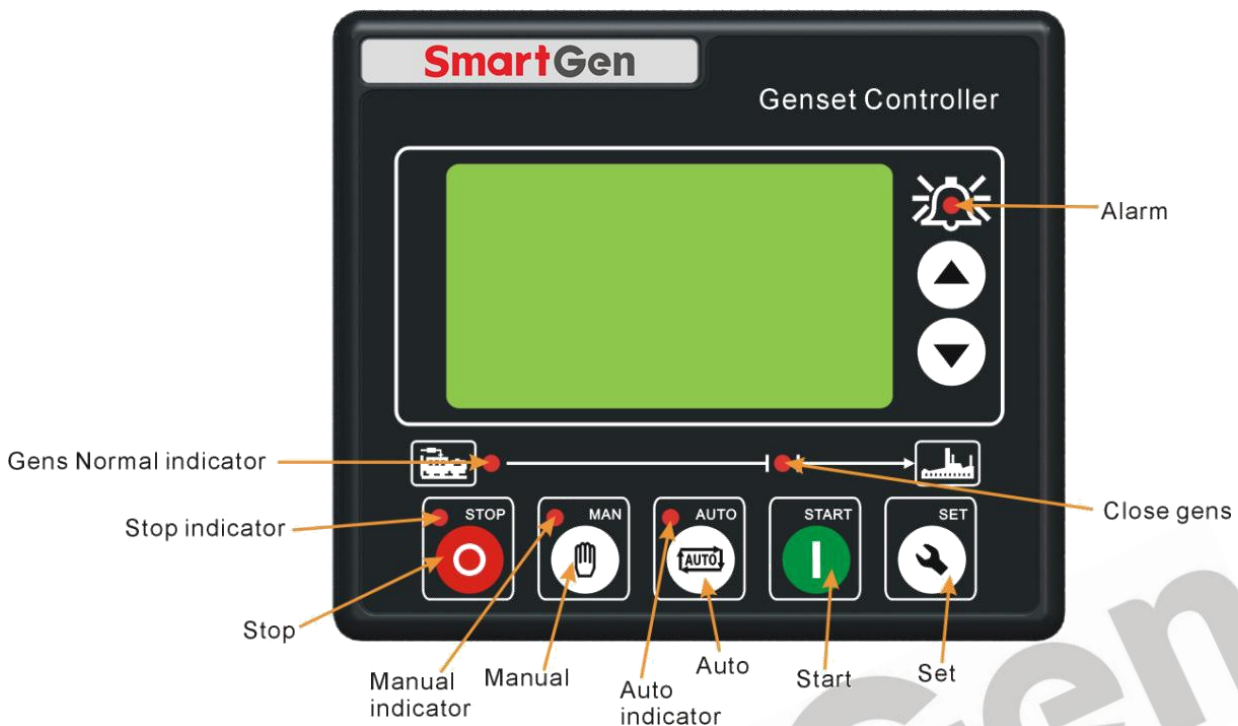

4.3 AUTOMATIC START/STOP OPERATION

Auto mode is selected by pressing the  button; a LED beside the button will illuminate to confirm the operation.

4.3.1 Auto Remote Start Sequence

- 1) **HGM410DC:** When “Remote Start” is active, “Start Delay” timer is initiated;
- 2) “Start Delay” countdown will be displayed on LCD;
- 3) When start delay is over, preheat relay energizes (if configured), “preheat delay XXs” information will be displayed on LCD;
- 4) After the above delay, the Fuel Relay is energized, and then one second later, the Start Relay is engaged. The engine is cranked for a pre-set time. If the engine fails to fire during this cranking attempt then the fuel relay and start relay are disengaged for the pre-set rest period; “crank rest time” begins and wait for the next crank attempt.
- 5) Should this start sequence continue beyond the set number of attempts, the start sequence will be terminated, the fourth line of LCD display will be highlighted with black and Fail to Start fault will be displayed.
- 6) In case of successful crank attempt, the “Safety On” timer is activated, allowing Low Oil Pressure, High Temperature, Under speed, Charge Alternator Failure and Auxiliary inputs (configured) to stabilise without triggering the fault. As soon as this delay is over, “start idle” delay is initiated (if configured).
- 7) During “start idle” delay, under speed, under frequency, under voltage alarms are inhibited. When this delay is over, “warming up” delay is initiated (if configured).
- 8) After the “warming up” delay, if generator status is normal, its indicator will be illuminated. If generator voltage and frequency have reached on-load requirements, then the generator close

relay will be energized; genset will take load; generator power indicator will illuminate and generator will enter into Normal Running status. If voltage or frequency is abnormal, the controller will initiate shutdown alarm (alarm information will be displayed on LCD).

4.3.2 Auto Remote Stop Sequence

- 1) When the "Remote Start" signal is removed, the Stop Delay is initiated.
- 2) Once this "stop delay" has expired, the Generator Breaker will open, the "Cooling Delay" is then initiated and generator power indicator will extinguish.
- 3) During "Stop Idle" Delay (if configured), idle relay is energized.
- 4) "ETS Solenoid Hold" begins, ETS relay is energized while fuel relay is de-energized.
- 5) "Fail to Stop Delay" begins, complete stop is detected automatically.
- 6) Generator is placed into its standby mode after its complete stop. Otherwise, fail to stop alarm is initiated and the corresponding alarm information is displayed on LCD.




4.3.3 Battery Under Volt Start/Stop Sequence

- 1) HGM410DC battery under voltage function is enabled;
- 2) When battery voltage under than battery under voltage threshold is detected, Battery Under Volt is displayed on LCD after 2s and the Under Volt Start Delay is initiated;
- 3) Battery Under Volt Start Delay is displayed on LCD;
- 4) Same with Step 3)~8) of Auto Remote Start Sequence after delay;
- 5) When battery voltage over than battery normal stop threshold is detected, Battery Normal Stop Delay is initiated;
- 6) Battery Normal Stop Delay count down is displayed on LCD;
- 7) Same with Step 2)~6) of Auto Remote Stop Sequence after delay.

4.3.4 Auto Self-check Start Sequence

- 1) When self-check delay of HGM410DC is larger than 0, genset self-check is enabled;
- 2) The genset start time from last stop and Self-check Count Down is initiated;
- 3) Self-check Count Down is displayed on LCD;
- 4) Same with Step 3)~8) of Auto Remote Start Sequence;
- 5) Self-check Working is initiated after genset start;
- 6) Self-check Working is displayed on LCD;
- 7) Same with Step 2)~6) of Auto Remote Stop Sequence after delay.

4.3.5 Manual Start/Stop Operation

- 1) Press  key to enter into Manual Mode and the Manual Indicator will illuminate. Then press  key to start the generator, it can automatically judge crank success and accelerate to high speed running. If high temperature, low oil pressure, over speed and abnormal voltage occur during genset running, controller can effectively protect genset to stop (detail procedures please refer to No.4.3.1 5)~8) of Auto start sequence). After genset high speed normal running, controller will send Gen Closed signal.
- 2) Manual stop: pressing  key can stop the running genset. (Details procedures please refer to No. 4.3.2 1)~6) of Auto stop sequence)

5 PROTECTION

5.1 WARNINGS

Warnings are not shutdown alarms and do not affect the operation of the gen-set. Warning alarms does not lead to shutdown. The alarm information will be displayed on LCD.

No.	Items	Description
1	High Temperature	When the controller detects that engine temperature has exceeded the pre-set value while shutdown is prohibited, or detects that the Aux. input high temperature while shutdown is prohibited, it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD.
2	Low Oil Pressure	When the controller detects that the oil pressure has fallen below the pre-set value while shutdown is prohibited, or detects that the Aux. input low oil pressure while shutdown is prohibited, it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD.
3	Gen Over Current	When the controller detects that the genset current has exceeded the pre-set value and the over current delay has expired, it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD.
4	Fail To Stop	After "fail to stop" delay/ ETS delay has expired, if gen-set does not stop completely, it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD.
5	Low Fuel Level	When the controller detects that the fuel level has fallen below the pre-set value while shutdown is prohibited, or detects that the Aux. input low fuel level while shutdown is prohibited, it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD.
6	Charge Alt Failure	When the controller detects that charger voltage has fallen below the pre-set value, it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD.
7	Battery Under Volt	When the controller detects that battery voltage has fallen below the pre-set value, it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD.
8	Battery Over Volt	When the controller detects that battery voltage has exceeded the pre-set value, it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD.
9	Auxiliary Input	When the controller detects that the auxiliary input warning signals, it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD.
10	Loss Of Speed Signal	When the controller detects that the engine speed is 0 and the delay is 0, it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD.



11	Low Coolant Level	When the controller detects the low coolant level input is active, it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD.
12	Temp. Sensor Open	When the controller detects that the temperature sensor is open circuit and the action select "Warn", it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD.
13	Oil Pressure Sensor Open	When the controller detects that the oil pressure sensor is open circuit and the action select "Warn", it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD.
14	Level Sensor Open	When the controller detects that the level sensor is open circuit and the action select "Warn", it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD.
15	Temp. Sensor 2 Open	If the config. sensor set as temperature sensor, When the controller detects that the temperature sensor is open circuit and the action select "Warn", it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD.
16	Oil Pressure Sensor 2 Open	If the config. sensor set as oil pressure sensor, When the controller detects that the oil pressure sensor is open circuit and the action select "Warn", it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD.
17	Coolant Level 2 Open	If the config. sensor set as level sensor, When the controller detects that the level sensor is open circuit and the action select "Warn", it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD.
18	High Temperature 2	When the controller detects that config. sensor temperature (sensor type: temperature sensor) has exceeded the pre-set value while shutdown is prohibited, it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD.
19	Low Oil Pressure 2	When the controller detects that config. sensor oil pressure (sensor type: oil pressure sensor) has fallen below the pre-set value while shutdown is prohibited, it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD.
20	Coolant Level 2	When the controller detects that config. sensor fuel level (sensor type: level sensor) has fallen below the pre-set value while shutdown is prohibited, it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD.
21	Maintenance Due	When the genset running time has exceeded the pre-set maintenance time, it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD. When the maintenance is inactive, the alarm resets.

22	Gen Over Volt	When the controller detects that generate voltage has exceeded the pre-set value, it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD.
23	Gen Under Volt	When the controller detects that generate voltage has fallen below the pre-set value, it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD.
24	Gen Over Freq	When the controller detects that generate frequency has exceeded the pre-set value, it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD.
25	Gen Under Freq	When the controller detects that generate frequency has fallen below the pre-set value, it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD.

5.2 SHUTDOWN ALARM

When controller detects shutdown alarm, it will send signal to open breaker and shuts down generator. The alarm information will be displayed on LCD.

No	Items	Description
1	Emergency Shutdown	When the controller detects that the emergency shutdown signal, it will initiate a shutdown alarm and the corresponding alarm information will be displayed on LCD.
2	High Temperature	When controller detects that the water/cylinder temperature has exceeded the pre-set value, it will initiate a shutdown alarm and the corresponding alarm information will be displayed on LCD.
3	Low Oil Pressure	When the controller detects that the oil pressure has fallen below the pre-set value, it will initiate a shutdown alarm and the corresponding alarm information will be displayed on LCD.
4	Over Speed	When the controller detects that the generator speed has exceeded the pre-set value, it will initiate a shutdown alarm and the corresponding alarm information will be displayed on LCD.
5	Under Speed	When the controller detects that the generator speed has fallen below the pre-set value, it will initiate a shutdown alarm and the corresponding alarm information will be displayed on LCD.
6	Loss Of Speed Signal	When the controller detects that the engine speed is 0 and the delay is <i>NOT</i> 0, it will initiate a shutdown alarm and the corresponding alarm information will be displayed on LCD.
7	Gen Over Voltage	When the controller detects that the genset voltage has exceeded the pre-set value, it will initiate a shutdown alarm and the corresponding alarm information will be displayed on LCD.
8	Gen Under Voltage	When the controller detects that the genset voltage has fallen below the pre-set value, it will initiate a shutdown alarm and the corresponding alarm information will be displayed on LCD.
9	Gen Over Current	When the controller detects that the genset current has exceeded the pre-set value and delay is not 0, it will initiate a shutdown alarm and the




No	Items	Description
		corresponding alarm information will be displayed on LCD.
10	Fail To Start	If the engine does not fire after the pre-set number of attempts, it will initiate a shutdown alarm and the corresponding alarm information will be displayed on LCD.
11	Gen Over Frequency	When the controller detects that the genset frequency has exceeded the pre-set value, it will initiate a shutdown alarm and the corresponding alarm information will be displayed on LCD.
12	Gen Under Frequency	When the controller detects that the genset frequency has fallen below the pre-set value, it will initiate a shutdown alarm and the corresponding alarm information will be displayed on LCD.
13	No Gens Frequency	When the controller detects that the genset frequency is 0, it will initiate a shutdown alarm and the corresponding alarm information will be displayed on LCD.
14	Low Fuel Level	When the controller detects that the fuel level has fallen below the pre-set value or detects that the low fuel level input is active, it will initiate a shutdown alarm and the corresponding alarm information will be displayed on LCD.
15	Low Coolant Level	When the controller detects the low coolant level input is active, it will initiate a shutdown alarm and the corresponding alarm information will be displayed on LCD.
16	Temp. Sensor Open	When the controller detects that the temperature sensor is open circuit and the action select "Shutdown", it will initiate a shutdown alarm and the corresponding alarm information will be displayed on LCD.
17	Oil Pressure Sensor Open	When the controller detects that the oil pressure sensor is open circuit and the action select "Shutdown", it will initiate a shutdown alarm and the corresponding alarm information will be displayed on LCD.
18	Level Sensor Open	When the controller detects that the level sensor is open circuit and the action select "Shutdown", it will initiate a shutdown alarm and the corresponding alarm information will be displayed on LCD.
19	Temp. Sensor 2 Open	If the config. sensor set as temperature sensor, When the controller detects that the temperature sensor is open circuit and the action select "Shutdown", it will initiate a shutdown alarm and the corresponding alarm information will be displayed on LCD.
20	Oil Pressure Sensor 2 Open	If the config. sensor set as oil pressure sensor, When the controller detects that the oil pressure sensor is open circuit and the action select "Shutdown", it will initiate a shutdown alarm and the corresponding alarm information will be displayed on LCD.
21	Coolant Level Sensor 2 Open	If the config. sensor set as level sensor, When the controller detects that the level sensor is open circuit and the action select "Shutdown", it will initiate a shutdown alarm and the corresponding alarm information will be displayed on LCD.
22	High Temperature 2	When the controller detects that config. sensor temperature (sensor type: temperature sensor) has exceeded the pre-set value, it will initiate a



No	Items	Description
		shutdown alarm and the corresponding alarm information will be displayed on LCD.
23	Low Oil Pressure 2	When the controller detects that config. sensor oil pressure (sensor type: oil pressure sensor) has fallen below the pre-set value, it will initiate a shutdown alarm and the corresponding alarm information will be displayed on LCD.
24	Low Coolant Level 2 Open	When the controller detects that config. sensor fuel level (sensor type: level sensor) has fallen below the pre-set value, it will initiate a shutdown alarm and the corresponding alarm information will be displayed on LCD.
25	Maintenance Due	When the genset running time has exceeded the pre-set maintenance time and maintenance action is set to be shutdown, it will initiate a warning alarm and the corresponding alarm information will be displayed on LCD. When the maintenance is inactive, the alarm resets.

SmartGen

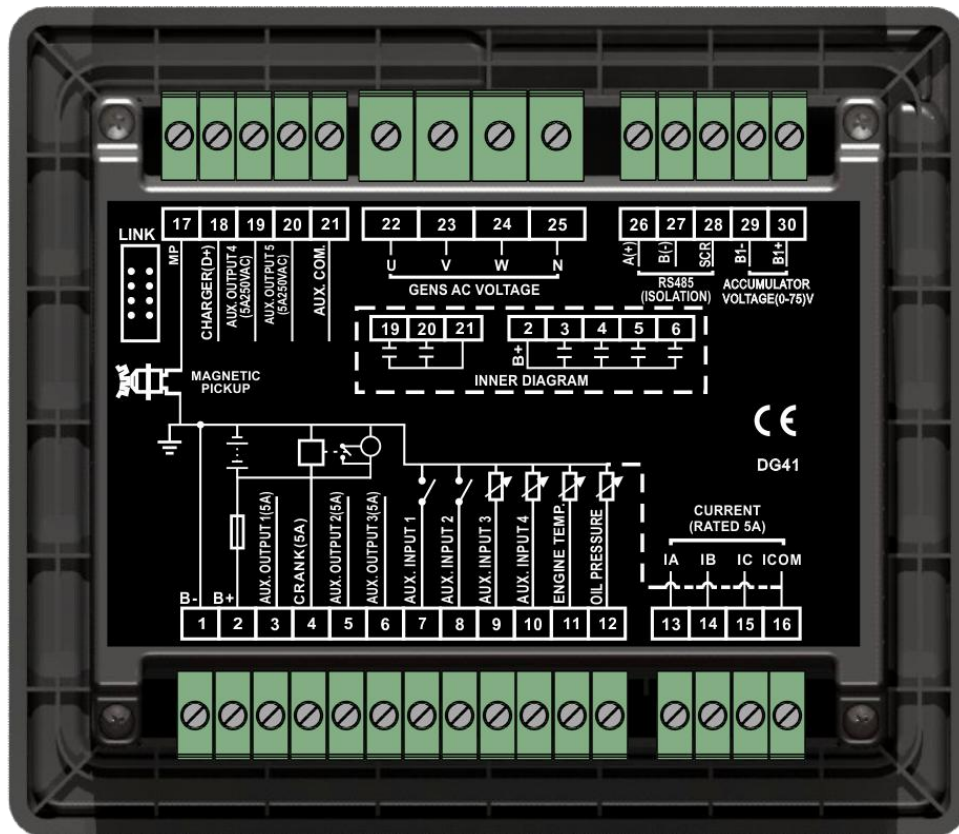6 CONNECTIONS


Description of terminal connections:

Pin	Function	Cable Size	Description	
1.	B-	1.5mm ²	Connected with negative of starter battery.	
2.	B+	1.5mm ²	DC power supply. Connected with positive of starter battery. If wire length is over 30m, better to double wires in parallel. Max. 20A fuse is recommended.	
3.	Aux. Output 1	1.0mm ²	B+ is supplied by 2 point, rated 5A.	
4.	Crank	1.0mm ²	Crank Relay Output; B+ is supplied by 2 point, rated 5A. Connect to starter coil.	
5.	Aux. Output 2	1.0mm ²	B+ is supplied by 2 point, rated 5A.	
6.	Aux. Output 3	1.0mm ²	B+ is supplied by 2 point, rated 5A.	
7.	Aux. Input 1	1.0mm ²	Ground connected is active (B-);	
8.	Aux. Input 2	1.0mm ²	Ground connected is active (B-);	
9.	Aux. Input 3	1.0mm ²	Ground connected is active (B-); Can be used as Level Sensor.	See 7.3
10.	Aux. Input 4	1.0mm ²	Ground connected is active (B-); Can be used as Config. Sensor.	
11.	Temp. Sensor	1.0mm ²	Connect to water temperature or cylinder temperature	See 7.4



Pin	Function	Cable Size	Description
			resistance sensor.
12.	Oil Pressure Sensor	1.0mm ²	Connect to oil pressure resistance sensor.
13.	Current IA	1.5mm ²	Outside connected to secondary coil of current transformer(rated 5A)
14.	Current IB	1.5mm ²	Outside connected to secondary coil of current transformer(rated 5A)
15.	Current IC	1.5mm ²	Outside connected to secondary coil of current transformer(rated 5A)
16.	Current COM	1.5mm ²	See INSTALLATION in this manual.
17.	Rotate Speed Sensor	0.5mm ²	Connect to rotate speed sensor, shielding line is recommended. The other terminal needs to connect to B-.
18.	CHARGER(D+)	1.0mm ²	Connect to charging starter's D+ terminal. If there is no this terminal, then be hang up.
19.	Aux. Output 4	1.0mm ²	The combination of terminal 19 and 21 is relay normally open contact; rated 5A; Voltage free.
20.	Aux. Output 5	1.0mm ²	The combination of terminal 20 and 21 is relay normally open contact; rated 5A; Voltage free.
21.	Aux. COM	1.5mm ²	Common terminal of auxiliary output 4 and 5.
22.	Gen AC Voltage U	1.0mm ²	Connected to U-phase of generator (2A fuse is recommended)
23.	Gen AC Voltage V	1.0mm ²	Connected to V-phase of generator (2A fuse is recommended)
24.	Gen AC Voltage W	1.0mm ²	Connected to W-phase of generator (2A fuse is recommended)
25.	Gen AC Voltage N2	1.0mm ²	Connected to N-wire of generator.
26.	RS485 A(+)	0.5mm ²	Connect to remote monitoring RS485 COM, A and B connect to communication wire, SCR connect to communication shielding line.
27.	RS485 B(-)	0.5mm ²	
28.	RS485 SCR	0.5mm ²	
29.	B1-	1.0mm ²	Connect to battery voltage.
30.	B1+	1.0mm ²	

NOTE: LINK interface is parameters programmable interface that can be programmed by PC using an SG72 adapter. If there is need to remote control the genset, please use the SG485 module produced by our company.

7 DEFINITION AND RANGE OF PARAMETERS

7.1 PARAMETER CONTENTS AND RANGE

No	Items	Range	Default	Description
1.	Start Delay	(0-3600)s	1	Time from mains abnormal or remote start signal is active to start genset.
2.	Stop Delay	(0-3600)s	1	Time from mains normal or remote start signal is deactivated to genset stop.
3.	Start Attempts	(1-10)times	3	Maximum crank times of crank attempts. When reach this number, controller will send start failure signal.
4.	Preheat Time	(0-300)s	0	Power-on time of heater plug before starter is powered up.
5.	Cranking Time	(3-60)s	8	Power-on time of starter
6.	Crank Rest Time	(3-60)s	10	The waiting time before second power up when engine start fail.
7.	Safety On Delay	(1-60)s	10	Alarms for low oil pressure, high temperature, under speed, under frequency/voltage, charge alt failure are inactive.
8.	Start Idle Time	(0-3600)s	0	Idle running time of genset when starting.
9.	Warming Up Time	(0-3600)s	10	Warming time between genset switch on and high speed running.
10.	Cooling Time	(3-3600)s	10	Radiating time before genset stop, after it unloads.
11.	Stop Idle	(0-3600)s	0	Idle running time when genset stop.
12.	ETS Solenoid Hold	(0-120)s	20	Stop electromagnet's power on time when genset is stopping.
13.	Fail to Stop Delay	(0-120)s	0	Time between ending of genset idle delay and stopped when "ETS time" is set as 0; Time between ending of ETS hold delay and stopped when "ETS time" is not 0.
14.	Breaker Close Time	(0-10)s	5.0	Pulse width of mains/generator switch on. When it is 0, means output constantly.
15.	Flywheel Teeth	(10-300)	118	Tooth number of the engine, for judging of starter crank disconnects conditions and inspecting of engine speed. See the installation instructions.
16.	Gen Abnormal Delay	(0-20.0)s	10.0	The alarm delay of generator over voltage and under voltage.
17.	Gen Over Voltage	(30-620)V	264	When generator voltage has exceeded the set value and the "Gen abnormal delay" has expired, Gen Over Voltage is active. When set the value as 620V, the controller does not detect over voltage signal.



No	Items	Range	Default	Description
18.	Generator Under Voltage	(30-620)V	196	When generator voltage has fallen below the set value and the “Gen abnormal delay” has expired, Gen Under Voltage is active. When set the value as 30V, the controller does not detect under voltage signal.
19.	Under Speed	(0-6000)r/min	1200	When engine speed has fallen below the set value for 10s, Under Speed is active. It will initiate a shutdown alarm signal.
20.	Over Speed	(0-6000)r/min	1710	When engine speed has exceeded the set value for 2s, Over Speed is active. It will initiate a shutdown alarm signal.
21.	Under Frequency	(0-75.0)Hz	45.0	When generator frequency has fallen below the set value but Not equal to 0 for 10s, Under Frequency is active. It will initiate a shutdown alarm signal.
22.	Over Frequency	(0-75.0)Hz	57.0	When generator frequency has exceeded the set value for 2s, Over Frequency is active. It will initiate a shutdown alarm signal.
23.	High Temperature	(80-140)°C	98	When the temperature value of the external temperature sensor exceeds the set value, “High Temperature” timer is initiated. Detecting only after safety on delay has expired. If the set value is 140, high temperature signal will not be sent (this only concerns external temperature sensor, not high temperature signal via configurable input port).
24.	Low Oil Pressure	(0-400)kPa	103	When the external pressure sensor value falls below this set value, “Low Oil Pressure” timer is initiated. Detecting only after safety on delay has expired. If the set value is 0, low oil pressure signal will not be sent (this only concerns pressure sensor and does not concern low oil pressure warning signal via configurable input port)
25.	Low Fuel Level	(0-100)%	10	When the liquid level of the external sensor falls below the set value, “Low Fuel Level” timer is initiated. (this only concerns fuel level sensor and does not concern low fuel level warning signal via configurable input port)
26.	Config. Sensor	(80-140)°C (0-400)kPa (0-100)%	98 103 10	Each value correspond to above 23 (Temperature sensor), 24 (Oil pressure sensor) and 25 (Level sensor), respectively.



No	Items	Range	Default	Description
27.	Loss of Speed Signal	(0-20.0)s	5.0	If the set value is 0, only warning and not to shutdown the generator.
28.	Charge Alt Failure	(0-30)V	6.0	During generator is normal running, when alternator D+(WL) voltage has fallen below the set value and remains for 5s, It will initiate a warning alarm signal. Only warning and not to shutdown the generator.
29.	Battery Over Voltage	(12.0-40.0)V	33.0	When battery voltage has exceeds the set value and remains for 20s, It will initiate a warning alarm signal. Only warning and not to shutdown the generator.
30.	Battery Under Voltage	(4.0-30.0)V	8.0	When battery voltage has fallen below the set value and remains for 20s, It will initiate a warning alarm signal. Only warning and not to shutdown the generator.
31.	Current Trans.	(5-6000)/5	500	The ratio of external CT
32.	Full Load Current Rating	(5-6000)A	500	Generator's rated current, used for load over current calculating.
33.	Over Current Percentage	(50-130)%	120	When the load current has exceeded the set value, "over current" delay is initiated.
34.	Over Current Delay	(0-3600)s	1296	When load current has exceeded the set value and the "over current" delay has expired, over current alarm is initiated. When the set value is 0, only warning and not to shutdown the generator.
35.	Fuel Pump On	(0-100)%	25	When fuel level has fallen below the set value for 10s, "Fuel Pump On" alarm is initiated.
36.	Fuel Pump Off	(0-100)%	80	When fuel level has exceeded the set value for 10s, "Fuel Pump Off" alarm is initiated.
37.	Aux. Output 1	(0-25)	14	Factory default: Fuel Relay Output
38.	Aux. Output 2	(0-25)	2	Factory default: Energized To Stop
39.	Aux. Output 3	(0-25)	3	Factory default: Idle Control
40.	Aux. Output 4	(0-25)	5	Factory default: Close Generator
41.	Aux. Output 5	(0-25)	6	Factory default: Mains Closed
42.	Aux. Input 1	(0-31)	1	Factory default: High Temperature Input
43.	Aux. Input 1 Active	(0-1)	0	Factory default: Close to active
44.	Aux. Input 1 Delay	(0-20.0)s	2.0	
45.	Aux. Input 2	(0-31)	2	Factory default: Low Oil Pressure Warning Input
46.	Aux. Input 2 Active	(0-1)	0	Factory default: Close to active
47.	Aux. Input 2 Delay	(0-20.0)s	2.0	
48.	Aux. Input 3	(0-31)	10	Factory default: Remote Start



No	Items	Range	Default	Description
49.	Aux. Input 3 Active	(0-1)	0	Factory default: Close to active
50.	Aux. Input 3 Delay	(0-20.0)s	2.0	
51.	Aux. Input 4	(0-31)	11	Factory default: Fuel Level Warn
52.	Aux. Input 4 Active	(0-1)	0	Factory default: Close to active
53.	Aux. Input 4 Delay	(0-20.0)s	2.0	
54.	Power On Mode	(0-1)	0	0: Stop Mode 1: Auto Mode
55.	Module Address	(1-254)	1	Communication address of controller.
56.	Passwords	(0-9999)	1234	
57.	Crank Disconnect	(0-5)	2	There are 3 conditions of disconnecting starter with engine: Generator Frequency, Magnetic Pickup, Oil Pressure. Each condition can be used alone and simultaneously to separating the start motor and genset as soon as possible. See 7.5
58.	Disconnect Magnetic Pickup	(0-3000)r/min	360	When engine speed higher than the set value, starter will be disconnected.
59.	Disconnect Generator Freq	(10.0-30.0)Hz	14.0	When generator frequency higher than the set value, starter will be disconnected.
60.	Disconnect Oil Pressure	(0-400)kPa	200	When generator oil pressure higher than the set value, starter will be disconnected.
61.	High Temperature Inhibit	(0-1)	0	Factory default: when high temperature occurs, shutdown alarm is initiated. 7.1 Note 1
62.	Low Oil Pressure Inhibit	(0-1)	0	Factory default: when low oil pressure occurs, shutdown alarm is initiated. 7.1 Note 2
63.	Low Fuel Level Inhibit	(0-1)	1	Factory default: when low fuel level occurs, shutdown alarm is initiated. 7.1 Note 2
64.	Config. Sensor Inhibit	(0-1)	1	Factory default: when config. sensor value higher/lower than the set value (particular case depends on the sensor type), shutdown alarm is initiated. 7.1 Note 2
65.	AC System	(0-3)	0	0: 3P4W; 1: 2P3W 2: 1P2W; 3: 3P3W 7.1 Note3
66.	Temp. Sensor Curve	(0-9)	08	SGX
67.	Pressure Sensor Curve	(0-9)	08	SGX
68.	Multiplex Level Sensor Input	(0-2)	0	0: Aux. Input 3 1: Level Sensor 7.1 Note 3
69.	Level Sensor Curve	(0-5)	3	SGD



No	Items	Range	Default	Description
70.	Multiplex Aux. Sensor Input	(0-3)	0	0: Aux. Input 4 1: Temperature Sensor 2: Oil Pressure Sensor 3: Level Sensor 7.1 Note 3
71.	Config. Sensor Curve	(0-9) (0-9) (0-5)	8 8 3	SGX SGX SGD
72.	Poles	(2-32)	4	
73.	Temperature Sensor Open	(0-2)	1	0: Indication (temperature sensor will show “+++”); 1:Warn; 2:Shutdown
74.	Oil Pressure Sensor Open	(0-2)	1	0: Indication (oil pressure sensor will show “+++”); 1:Warn; 2:Shutdown
75.	Fuel Level Sensor Open	(0-2)	1	0: Indication (fuel level sensor will show “+++”); 1:Warn; 2:Shutdown
76.	Config. Sensor Open	(0-2)	1	0: Indication (LCD display will show “+++”); 1:Warn; 2:Shutdown
77.	Air-cooler On Temp.	(0-140)°C	60	When an output port was set to air-cooler output, it will control the air-cooler to start/stop.
78.	Air-cooler Off Temp.	(0-140)°C	40	
79.	Low Fuel Level Warn	(0-100)%	20	When the liquid level of the external sensor falls below the set value, “Low Fuel Level” timer is initiated. (this only concerns fuel level sensor and does not concern low fuel level warning signal via configurable input port)
80.	Maintenance Enabled	(0-1)	0	0: Disabled 1: Enabled
81.	Maintenance Time	(0-5000)h	30	Used to set maintenance rest time.
82.	Maintenance Due	(0-1)	0	0: Warn; 1: Shutdown
83.	Gen Over Volt Warn	(30-620)V	240	When generator voltage has exceeded the set value and the “Gen Over Volt delay” has expired, Gen Over Voltage is active. When set the value as 620V, the controller does not detect over voltage signal.
84.	Gen Under Volt Warn	(30-620)V	210	When generator voltage has fallen below the set value and the “Gen abnormal delay” has expired, Gen Under Voltage is active. When set the value as 30V, the controller does not detect under voltage signal.



No	Items	Range	Default	Description
85.	Gen Over Freq Warn	(0-75.0)Hz	55.0	When generator frequency has exceeded the set value, Over Frequency is active. It will initiate a warn signal.
86.	Gen Under Freq Warn	(0-75.0)Hz	47.0	When generator frequency has fallen below the set value, Under Frequency is active. It will initiate a warn signal.
87.	Over Current Percentage	(0-130)%	110	When load current has exceeded the set value, Over Current is active. It will not initiate a warn signal when set this value as 0.
88.	High Temperature	(80-140)°C	95	When the temperature value of the external temperature sensor exceeds the set value, "High Temperature" timer is initiated. Detecting only after safety on delay has expired. If the set value is 140, high temperature signal will not be sent (this only concerns external temperature sensor, not high temperature signal via configurable input port).
89.	Low Oil Pressure	(0-400)kPa	124	When the external pressure sensor value falls below this set value, "Low Oil Pressure" timer is initiated. Detecting only after safety on delay has expired. If the set value is 0, low oil pressure signal will not be sent (this only concerns pressure sensor and does not concern low oil pressure warning signal via configurable input port)
90.	Over Volt Delay	(0-20.0)s	10.0	When generator voltage has exceeded shutdown threshold value and last for this delay time, Over Volt Shutdown is active.
91.	Over Freq Delay	(0-20.0)s	10.0	When generator frequency has exceeded shutdown threshold value and last for this delay time, Over Freq Shutdown is active.
92.	Bat Under Volt Start Enabled	(0-1)	1	0: Disabled; 1: Enabled Battery under voltage start is enabled.
93.	Bat Under Volt Start Threshold	(0-60.0)V	8.0	When the battery voltage falls below battery under volt start threshold and last for 2s, Battery Volt Abnormal signal is sent. This value only warns but not shutdown. When the controller is in auto mode, it hints Bat Under Volt Start Delay. When battery under volt last until that delay ends, the genset will start automatically.
94.	Bat Under Volt Start Delay	(0-500)min	5	



No	Items	Range	Default	Description
95.	Bat Normal Shut Threshold	(0-60.0)V	13.0	If the battery is in auto mode due to battery under volt start, the controller hints Battery Normal Shut Delay when battery voltage has exceeded normal shutdown threshold; when battery is normal until the delay ends, genset will stop.
96.	Bat Normal Shut Delay	(0-500)min	5	
97.	Self-check Delay	(0-9999)h	336	Begin to time from last shutdown. When the accumulated time has exceeded or equal to self-check delay and the controller is in auto mode, the genset will start to run; when the accumulated time has exceeded or equal to self-check time, the genset stops. When the self-check delay is set to 0, the function is deactive.
98.	Self-check Time	(0-500)min	30	
99.	Custom Sensor Curve	(0-3)	0	It can be customized as Temp. Sensor, OP sensor, Level Sensor or Config. Sensor curve.

▲Note 1: if “high temperature inhibit” is configured, or set auxiliary input as “inhibit high temperature stop” and this input is active, when temperature is higher than the preset value, or high temperature alarm input is active, controller will send warning signal only and not stop the unit.

▲Note 2: if “low oil pressure inhibit” is configured, or set auxiliary input as “inhibit low oil pressure stop” and this input is active, when oil pressure is lower than the preset value, or low oil pressure alarm input is active, controller will send warning signal only and not stop the unit.

▲Note 2: if “3-phase 3-wire” is configured, the maximum of generate over voltage shutdown threshold can be set to 620V; if it is not configured, then the maximum only can be set to 360V;

▲Note 4: Multiplex Input can be set as “auxiliary input” or “level sensor”; if one of them is set successfully, then the corresponding items are active. For instance, if set “Multiplex Input 3” as “Aux. Input”, the related configuration items of auxiliary input 3 are active; if set “Multiplex Input 3” as “Level Sensor”, the related configuration items of level sensor are active.



7.2 PROGRAMMABLE OUTPUT 1-5

No	Items	Description
0	Not Used	Output port is deactivated when "Not Used" is selected.
1	Common Alarm	Include all shutdown alarms and warning alarms. When there is warning alarm only, it is not self-lock; when a shutdown alarm occurs, it is self-lock until the alarm is reset.
2	Energized to Stop	Suitable for genset with electromagnet and will active after "stop idle delay". It is deactivated when the "ETS Solenoid delay" expires.
3	Idle Control	Used for engine which has idles. Close before starting and open in warming up delay; Close during stop idle delay and open when stop is completed.
4	Preheat Control	Close before starting and open before power up;
5	Close Generator	When close time is 0, it's continuous output.
6	Reserved	
7	Open ATS	When close time is 0, it's disabled.
8	Raise Speed	Close when the generator enters into Warming Up delay (close time: warming up delay) while open when Aux.
9	Drop Speed	Close when the generator enters into Stop Idle delay/ Energized to Stop delay (close time: Stop Idle delay) while open when Aux.
10	Generator Run	Action when genset is normal running while deactivated when engine speed is lower than the "crank disconnect speed".
11	Fuel Pump Control	Close when fuel level is lower than the "Fuel Pump On" value or when low fuel level warning input is active; Open when fuel level is higher than the "Fuel Pump Off" and low fuel level warning input is deactivated;
12	High Speed Control	Close when the generator enters into Warming Up delay while open after cooling delay.
13	In Auto Mode	The controller is in automatic mode.
14	Fuel Relay Output	To control fuel relay output.
15	Generator Excite	Output in start period. If there is no generator frequency during safety running, output for 2 seconds.
16	Air-cooler	Control air-cooler to start/stop according to air-cooler switch temperature.
17	Louver Control	Active when gens starting, open after gens stop.

7.3 PROGRAMMABLE INPUT 1-4 TABLE (ACTIVE WHEN CONNECT GND (B-))

No	Items	Description
0	Not Used	
1	High Temperature Input	If these signals are active after safety on delay, shutdown alarm will be immediately initiated.
2	Low Oil Pressure Warning Input	
3	Auxiliary Warning	Only warning and not stops if this input is active.
4	Emergency Stop Input	Shutdown alarm will be immediately initiated if this input is active.
5	High Temperature Stop Input	When the gen-set is running normally and this signal is activated, if there is a high temperature situation, the controller will first cool down the generator and then stop it; if the signal is deactivated and a high temperature situation occurs, the controller will shut down the gen-set without cooling down.
6	Generator Closed Input	
7	Reversed	
8	Inhibit High Temperature Stop	When it is active, prohibit stopping when high temperature occurs. 7.1 Note 1
9	Inhibit Low Oil Pressure Stop	When it is active, prohibit stopping when low oil pressure occurs. 7.1 Note 2
10	Remote Start	
11	Fuel Level Warn	
12	Coolant Level Warn	
13	Fuel Level Shutdown	
14	Coolant Level Shutdown	
15	Auto Start Inhibit	In Auto mode, if this input is active, whether remote start signal occurs or not, the controller will not give a start command to the generator. If generator is normal running, stop command won't be executed. When this input is deactivated, genset will automatically start or stop according to the mains status (normal or abnormal).
16	Reversed	
17	Reversed	
18	Panel Lock	When input is active, all keys except the "Up\Down" buttons are inactive.
19	Auto/Manual Switch	If this input is active, the controller will switch to Auto mode automatically and panel buttons are inactive (Local mode is inactive); if this input is inactive, the controller will switch to Manual mode automatically (Remote mode is inactive).
20	Reversed	
21	Reversed	
22	Reversed	
23	Reversed	
24	Reversed	
25	Reversed	
26	Reversed	
27	Reversed	
28	Reversed	
29	Reversed	
30	Reversed	
31	Reversed	



7.4 SENSOR SELECT

No.	Items	Content	Description
1	Temperature Sensor	0 Not used 1 User Defined Resistive Type 2 VDO 3 SGH(Huanghe sensor) 4 SGD(Dongkang sensor) 5 CURTIS 6 DATCON 7 VOLVO-EC 8 SGX 9 Reserved	Defined resistive range is (0~6000) Ω , default is SGX sensor.
2	Pressure Sensor	0 Not used 1 User Defined Resistive Type 2 VDO 10Bar 3 SGH(Huanghe sensor) 4 SGD(Dongkang sensor) 5 CURTIS 6 DATCON 10Bar 7 VOLVO-EC 8 SGX 9 Reserved	Defined resistive range is (0~6000) Ω , default is SGX sensor.
3	Fuel Level Sensor	0 Not used 1 User Defined Resistive Type 2 SGH 3 SGD 4 Reserved 1 5 Reserved 2	Defined resistive range is (0~6000) Ω , default is SGD sensor.




7.5 CONDITIONS OF CRANK DISCONNECT


No	Content
0	Magnetic pickup
1	Generator Frequency
2	Magnetic pickup + Generator Frequency
3	Magnetic pickup + Oil pressure
4	Generator Frequency + Oil pressure
5	Generator Frequency + Magnetic pickup + Oil pressure

1. There are 3 conditions to make starter separate with engine; magnetic pickup, generator frequency can be used separately while oil pressure must be used together with magnetic pickup and generator frequency. The aim is to disconnect the starter motor as soon as possible.
2. Magnetic pickup is the magnetic equipment which be installed in starter for detecting flywheel teeth.
3. When set as magnetic pickup, must ensure that the number of flywheel teeth is as same as setting, otherwise, "over speed shutdown" or "under speed shutdown" may be caused.
4. If genset without magnetic pickup, please don't select corresponding items, otherwise, "start fail" or "loss speed signal" maybe caused.
5. If genset without oil pressure sensor, please don't select corresponding items.
6. If not select generator frequency in crank disconnect setting, controller will not collect and display the relative power quantity (can be used in water pump set); if not select magnetic pickup in crank disconnect setting, the engine speed displayed in controller is calculated by generator signal.

8 PARAMETERS SETTING

8.1 SETTING MENU

Start the controller, then press  to enter into the parameters setting menu, see fig below:

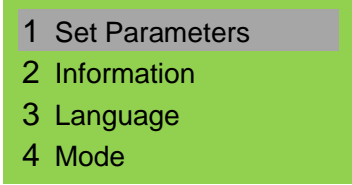- 
- 1 Set Parameters
 - 2 Information
 - 3 Language
 - 4 Mode

8.2 PARAMETERS SETTING

When entering password interface, inputting “1234” can set part of the parameter items in **7.1** while “0318” can set all the items. If there is need to set more parameters (e.g. voltage calibration; current calibration), please contact the factory.

 **Note:**

1. Please change the controller parameters when generator is in standby mode only (e. g. Crank disconnect conditions selection, auxiliary input, auxiliary output, various delay), otherwise, shutdown and other abnormal conditions may occurs.
2. Over voltage set value must be higher than under voltage set value, otherwise over voltage and under voltage condition may occur simultaneously.
3. Over speed set value must be higher than under speed set value, otherwise over speed and under speed condition may occur simultaneously.
4. Please set the generator frequency value as low as possible when cranking, in order to make the starter be separated quickly as soon as possible.
5. Auxiliary input 1~4 could not be set as same items; otherwise, there are abnormal functions. However, the auxiliary output 1~5 can be set as same items.
6. If need to shut down after cooling, please set any auxiliary input as “High Temperature Stop Input”, then connect this input port to GND.

8.3 INFORMATION

LCD will display software version, issue date of the controller.



 **Note:** In this interface, press  will display the auxiliary inputs and outputs status.

8.4 LANGUAGE

Simplified Chinese, English, Spanish, Russian and Turkish interface can be selected.


8.5 MODE

Manual mode, Auto mode and Stop mode can be selected via this interface.

 **Note:** Pressing  key at any time will quit the setting and return to the previous setting menu.

9 SENSOR SETTING

- 1) When reselect sensors, the sensor curve will be transferred into the standard value. For example, if temperature sensor is SGH (120°C resistor type), its sensor curve is SGH (120°C resistor type); if select the SGD (120°C resistor type), the temperature sensor curve is SGD curve.
- 2) When there is difference between standard sensor curves and using sensor, user can adjust it in “curve type”.
- 3) When input the sensor curve, X value (resistor) must be input from small to large, otherwise, mistake occurs.
- 4) If select sensor type as “None”, sensor curve is not working and LCD does not display the sensor information.
- 5) If there is no oil pressure sensor, but there is low oil pressure alarm switch, user must set the oil pressure sensor as “None”, otherwise, maybe low oil pressure shutdown occurs.
- 6) The headmost or backmost values in the vertical coordinates can be set as same as below:

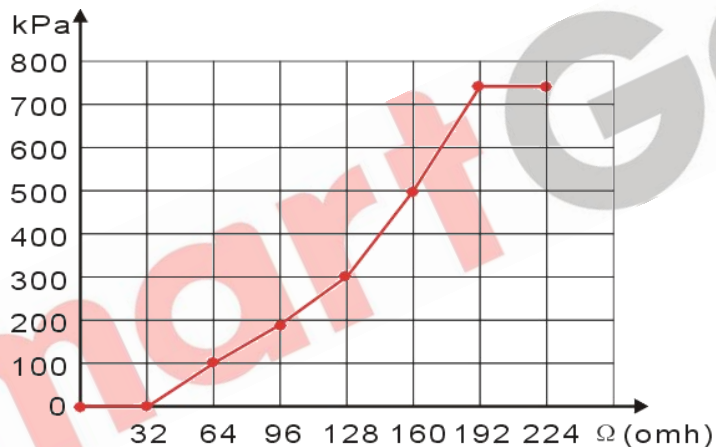

Common unit conversion table

	N/m ² (pa)	kgf/cm ²	bar	(p/in ² .psi)
1Pa	1	1.02x10 ⁻⁵	1x10 ⁻⁵	1.45x10 ⁻⁴
1kgf/cm ²	9.8x10 ⁴	1	0.98	14.2
1bar	1x10 ⁵	1.02	1	14.5
1psi	6.89x10 ³	7.03x10 ⁻²	6.89x10 ⁻²	1

10 COMMISSIONING


Please make sure the following checks are made before commissioning,

- 1) Ensure all the connections are correct and wires diameter is suitable.
- 2) Ensure that the controller DC power has fuse, controller's positive and negative connected to start battery are correct.
- 3) Take proper action to prevent engine to crank success (e. g. Remove the connection wire of fuel valve). If checking is OK, make the start battery power on.
- 4) Set controller under non-auto mode, press "start" button, genset will start. After the cranking times as setting, controller will send signal of Start Failure; then press "stop" to reset controller.
- 5) Recover the action to prevent engine to crank success (e. g. Connect wire of fuel valve), press start button again, genset will start. If everything goes well, genset will normal running after idle running (if idle run be set). During this time, please watch for engine's running situations and AC generator's voltage and frequency. If abnormal, stop genset and check all wires connection according to this manual.
- 6) Select the AUTO mode from controller's panel, connect mains signal. After the mains normal delay, controller will transfer ATS (if fitted) into mains load. After cooling time, controller will stop genset and make it into "at rest" mode until there is mains abnormal situation.
- 7) When mains is abnormal again, genset will be started automatically and enter into normal running, then controller send signal to making generator switch on, and control the ATS transfer into generator load. If not like this, please check ATS' wires connection according to this manual.
- 8) If there is any other question, please contact Smartgen's service.




11 TYPICAL APPLICATION

HGM410DC Typical Wiring Diagram

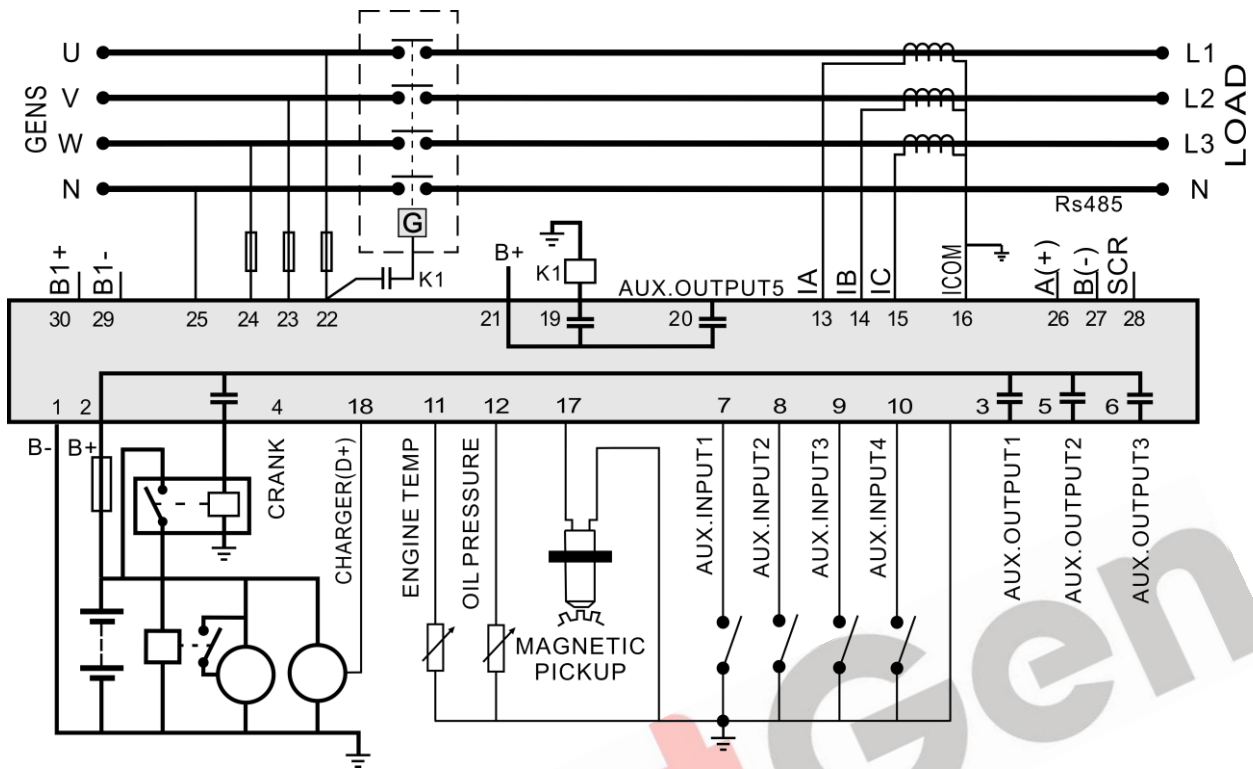

Note: Aux. Input 3 can be set as temperature sensor or oil pressure sensor; Aux. Input 4 can be set as temperature sensor, oil pressure sensor or level sensor.

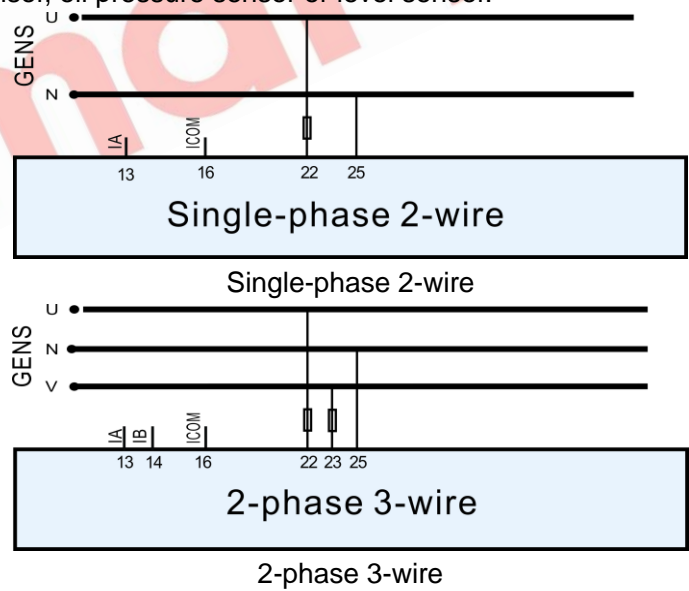


- CAUTION!** Expand relay with high capacity in start and fuel output is recommend.
- CAUTION!** Expand relay must be used in gen closed outputs.
- Note:** Let its normally closed contact series connect between fuel relay output port and electromagnetic valve when you connect emergency stop button on the controller. Emergency stop alarm can be displayed if you configure one input port as "Emergency Shutdown" (one end connect to normally open contact, the other end connect to ground).

12 FIXING CLIPS


Controller is panel built-in design; it is fixed by clips when installed.

- 1) Withdraw the fixing clip screw (turn anticlockwise) until it reaches proper position.
- 2) Pull the fixing clip backwards (towards the back of the module) ensuring two clips are inside their allotted slots.
- 3) Turn the fixing clip screws clockwise until they are fixed on the panel.

Note: Care should be taken not to over tighten the screws of fixing clips.

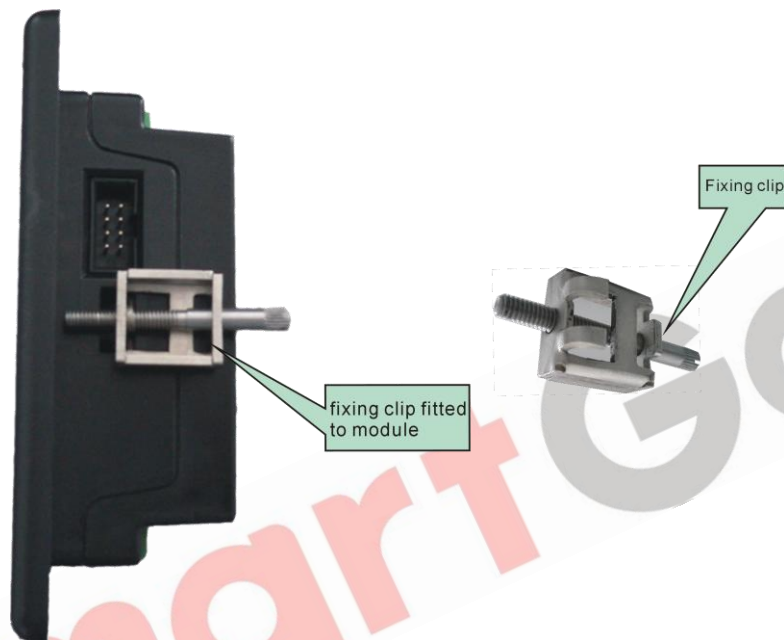

13 OVERALL DIMENSION AND PANEL CUTOUT

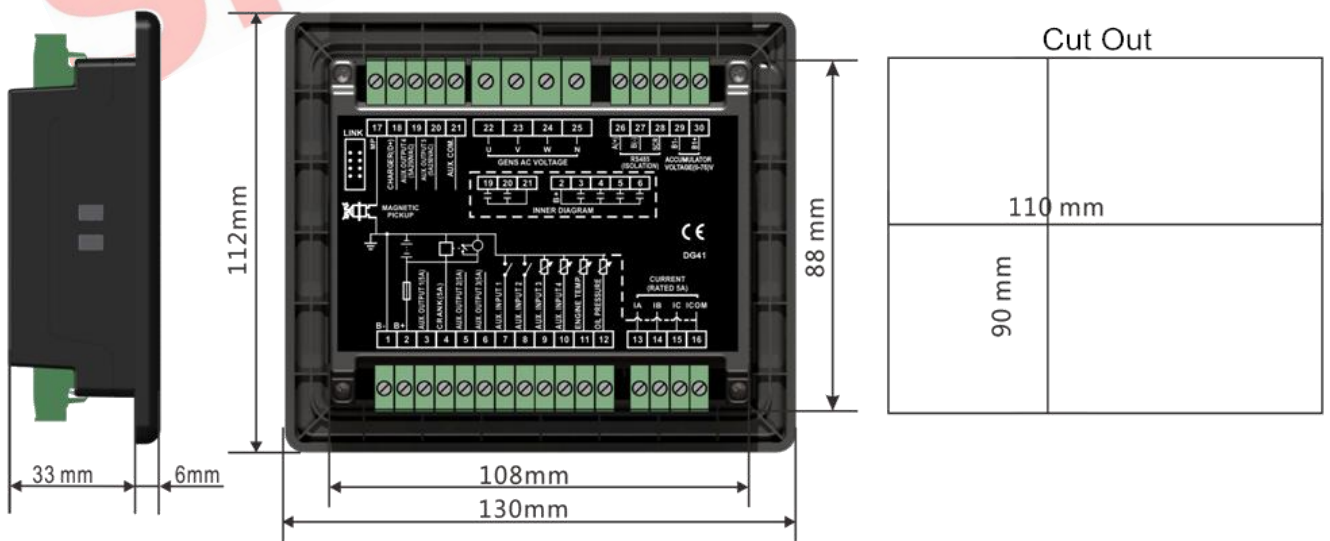

14 INSTALLATION ANNOUNCEMENTS

14.1 BATTERY VOLTAGE INPUT

HGM410DC controller can suit for widely range of battery voltage DC(8~35)V. Negative of battery must be connected with the engine shell. The diameter of wire which from power supply to battery must be over 1.5mm². If floating charge configured, please firstly connect output wires of charger to battery's positive and negative directly, then, connect wires from battery's positive and negative to controller's positive and negative input ports in order to prevent charge disturbing the controller's normal working.

14.2 SPEED SENSOR INPUT


Speed sensor is the magnetic equipment which be installed in starter and for detecting flywheel teeth. Its connection wires to controller should apply for 2 cores shielding line. The shielding layer should connect to shielding GND terminal in controller while another side is hanging in air. The else two signal wires are connected to 1 and 17 terminals. The output voltage of speed sensor should be within AC(1~24)V (effective value) during the full speed. AC12V is recommended (in rated speed). When install the speed sensor, let the sensor is spun to contacting flywheel first, then, port out 1/3 lap, and lock the nuts of sensor at last.

14.3 OUTPUT AND EXPANSION RELAY

All outputs of controller are relay contact output type. If need to expand the relays, please add freewheel diode to both ends of expand relay's coils (when coils of relay has DC current) or, add resistance-capacitance return circuit (when coils of relay has AC current), in order to prevent disturbance to controller or others equipment.

14.4 AC INPUT

HGM410DC controller must be connected to outside current transformer. And the current transformer's secondary side current must be 5A. At the same time, the phases of current transformer and input voltage must correct. Otherwise, the collected current and active power maybe not correct.

 **CAUTION!** ICOM port must be connected to negative pole of battery.

 **WARNING!** When there is load current, transformer's secondary side prohibit open circuit.

14.5 WITHDRAW VOLTAGE TEST

When controller had been installed in control panel, if need the high voltage test, please disconnect controller's all terminal connections, in order to prevent high voltage into controller and damage it.



15 TROUBLESHOOTING

Symptom	Possible Remedy
Controller no response with power.	Check starting batteries; Check controller connection wirings; Check DC fuse.
Genset shutdown	Check the water/cylinder temperature is too high or not; Check the genset AC voltage; Check DC fuse.
Low oil pressure alarm after crank disconnect	Check the oil pressure sensor and its connections.
High water temp. alarm after crank disconnect	Check the temperature sensor and its connections.
Shutdown Alarm During Running	Check related switch and its connections according to the information on LCD; Check auxiliary inputs.
Fail to Start	Check fuel circuit and its connections; Check starting batteries; Check speed sensor and its connections; Refer to engine manual.
Starter no response	Check starter connections; Check starting batteries.
Genset running while ATS not transfer	Check ATS; Check the connections between ATS and controllers.